

SIMATIC NET

Installationsanleitung Installation Instructions C79000-B8274-C386-02

Ausgabe 2 1999 Release 2 1999

TF-1413/Windows 98

Nachfolgend finden Sie Informationen in deutscher Sprache. This document contains information in English.

C79000-B8274-C386-02 © SIEMENS AG 1999 Änderungen vorbehalten Subject to change

Siemens Aktiengesellschaft

Sprachenverzeichnis Language Versions

Installationsanleitung - deutschSeite		
Installation Instructions - English	Page	37



deutsch

SIMATIC NET

Installationsanleitung

C79000-B8274-C386-02

Ausgabe 2 1999

TF-1413/Windows 98

C79000-B8274-C386-02 © SIEMENS AG 1999 Änderungen vorbehalten

Warnung

Inbetriebnahme Vor der Inbetriebnahme sind die Hinweise in der entsprechenden aktuellen Dokumentation zu beachten. Die Bestelldaten hierfür entnehmen Sie bitte den Katalogen, oder wenden Sie sich an Ihre örtliche Siemens-Geschäftsstelle.

Die Inbetriebnahme ist solange untersagt, bis festgestellt wurde, daß die Maschine, in die diese Komponenten eingebaut werden sollen, den Bestimmungen der Richtlinie 89/392/EWG entspricht.

Benutzerhinweise

Zeichen im Text	Im Text sind folgende Zeichen enthalten, um besondere Aufmerksam- keit zu erzeugen. Sie haben folgende Bedeutung:	
(F	Dieses Zeichen macht Sie auf Besonderheiten und Gefahren auf- merksam.	
\checkmark	Dieses Zeichen fordert Sie zu einer Handlung auf. Arbeiten Sie bitte die mit einem Haken gekennzeichneten Hinwei- se nacheinander ab.	
Eingetragene Marken	SIMATIC, SIMATIC NET und SINEC sind eingetragene Marken der Siemens AG. Die übrigen Bezeichnungen können Marken sein, deren Benutzung durch Dritte für deren Zwecke die Rechte der Inhaber ver- letzen können.	

Weitergabe sowie Vervielfältigungen dieser Unterlage, Verwertung und Mitteilung ihres Inhaltes ist nicht gestattet, soweit nicht ausdrücklich zugestanden.

Zuwiderhandlungen verpflichten zu Schadenersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder des GM-Eintrags.

Wir haben den Inhalt der Druckschrift auf Übereinstimmung mit der beschriebenen Hard- und Software geprüft. Dennoch können Abweichungen nicht ausgeschlossen werden, so daß wir für die vollständige Übereinstimmung keine Gewähr übernehmen. Die Angaben in dieser Druckschrift werden jedoch regelmäßig überprüft, und notwendige Korrekturen sind in den nachfolgenden Auflagen enthalten. Für Verbesserungsvorschläge sind wir dankbar.

© SIEMENS AG 1996 bis 1999 All rights reserved

4

Siemens Aktiengesellschaft

Technische Änderungen vorbehalten

Übersicht

Produkte

Die vorliegende Installationsanleitung beschreibt die Installation des Produkts: TF-1413/Windows 98

Inhaltsverzeichnis

1	Voraussetzungen	7
1.1	Hardware-Voraussetzungen	7
1.2	Software-Voraussetzungen	8
2	Hardware-Einschränkungen	9
2.1	Rechner mit SCSI-Controller	9
3	Installation der Software	10
3.1	Vorbereitung	10
3.2	Hinweise zur Installation	11
3.3	Start	14
3.4	Konfiguration	
3.5	Betrieb von PC-Netzen	23
4	Wo Sie Hilfe bekommen	25
4.1	Hilfe bei technischen Fragen	25
4.2	Ansprechpartner für SIMÄTIC NET-Schulung	28
5	Anhang - Installationsanleitung des CP 1413	29
5.1	Probleme bei Vergabe der Hardware Ressourcen	

1 Voraussetzungen

1.1 Hardware-Voraussetzungen

Rechner	Das Produkt TF-1413/Windows 98 kann nur auf einem AT-kompatiblen PC mit ISA-Steckplatz eingesetzt werden.	
	Bitte lesen Sie hierzu auch die Datei LIESMICH.TXT auf der SIMATIC NET CD.	
CP 1413	Zum Betrieb benötigen Sie einen SIMATIC NET-Kommunikations- prozessor CP 1413. Stellen Sie bitte vor dem Einbau des CP 1413 dessen E/A-Bereich so ein, wie es von der Installationsprozedur vorge- schlagen wird. Beim Einbau von mehreren Baugruppen ist darauf zu achten, daß auf jedem CP ein anderer E/A-Bereich eingestellt ist.	
E/A-Bereich	Jeder CP 1413 belegt vier fortlaufende Adressen des E/A- Adreßraums ab einer einstellbaren Basisadresse. Als Basisadressen (hex.) stehen zur Auswahl: 100, 390 und 3E0. Die Einstellung der Adresse (per Steckbrücken) wird im Kapitel 5 "Anhang - Installationsanleitung des CP 1413" beschrieben. Die Plug-and-Play-Funktionen von Windows 98 wählen automatisch	
	einen freien E/A-Bereich. Sie sollten deshalb zuerst die Software in- stallieren, um einen freien E/A-Bereich zu erhalten. Diesen Bereich stellen Sie beim CP 1413 ein, bevor Sie ihn einbauen.	

1.2 Software-Voraussetzungen

Betriebssystem	Als Betriebssystem wird Windows 98 vorausgesetzt.
Interrupt	Jeder CP 1413 belegt im Betrieb einen Interrupt. Dieser ist über die Software einstellbar und kann unter den folgenden Werten gewählt werden:
	IRQ 5, IRQ 10, IRQ 12, IRQ 15.
	Die Plug-and-Play-Funktionen von Windows 98 wählen automatisch einen der obigen Interrupts aus.
Adreßbereich des Dualport RAM	Jeder CP 1413 belegt beim Betrieb einen Dualport-RAM- Speicherbereich von mindestens 64 Kbyte. Die Lage des Bereichs wird im Konfigurationsprogramm eingestellt.
	Die Plug-and-Play-Funktionen von Windows 98 wählen automatisch einen passenden Dualport-RAM-Speicherbereich aus.
	Bei einigen Rechnermodellen ist bei einem Speicherausbau über 16 MByte der Zugriff auf den ISA-Bus nur im Bereich D 0000H - D FFFFH oder E 0000H - E FFFFH möglich. Eventuell müssen Sie Einstellungen im BIOS Ihres Rechners vorneh- men. Lesen Sie hierzu die BIOS-Beschreibung Ihres Rechners.
E.	Falls Sie ein Speicherverwaltungsprogramm wie z. B. EMM386 benutzen, so müssen Sie diesem den verwendeten Speicherbe- reich bekanntgeben. Bei EMM386 beispielsweise dadurch, daß Sie in der Datei CONFIG.SYS die Anweisung
	Device=C:\DOS\EMM386.EXE X=D000-DFFF einfügen oder, falls bereits vorhanden, ergänzen. Für weitere Op- tionen beachten Sie bitte das Handbuch zu Ihrem Betriebssystem und dem von Ihnen verwendeten Speicherverwalter.
SIMATIC NET-CD	Das Programmpaket wird zusammen mit anderen SIMATIC NET- Produkten auf einer CD-ROM geliefert.
Speicherbedarf auf der Festplatte	Der Speicherbedarf des Produkts wird bei der Installation angezeigt und der vorhandene Platz auf dem Ziellaufwerk überprüft.

2 Hardware-Einschränkungen

2.1 Rechner mit SCSI-Controller

Ś

Falls sich die Speicherbereiche des CP und des SCSI-Controllers überschneiden, kann es zu einem Speicherfehler kommen, der zum Abbruch von Windows führt. Um Windows erneut erfolgreich starten zu können, muß in diesem Fall mindestens einer der betroffenen Treiber entfernt oder deaktiviert werden. Befragen Sie hierzu Ihren Systemadministrator.

Eine Überschneidung der Speicherbereiche kann u.U. auch zur Zerstörung der Daten auf der Festplatte führen.

Befindet sich der SCSI-Controller auf dem Motherboard, kann es bei Speicherbereichsüberschneidungen zum Löschen des BIOS kommen. Deswegen empfehlen wir in diesem Fall die Benutzung höherliegender Speicherbereiche für CP 1413 bzw. CP 5412 (A2).

3 Installation der Software

3.1 Vorbereitung

Vorbereitung der SW-Installation	Zur Vorbereitung der Software-Installation gehen Sie bitte wie folgt vor:		
✓	Lesen Sie die Datei LIESMICH.TXT auf der CD-ROM.		
\checkmark	Lesen Sie	e die vorliegende Installationsanleitung sorgfältig durch.	
Installation mit CD	Das von Ihnen gewünschte Produkt ist auf der beigefügten CD enthal- ten.		
	Unter Windows 98 und Windows NT erfolgt die Installation über das Installationsprogramm SETUP.EXE im Hauptverzeichnis der CD.		
Installation mit Disketten	Wenn das gewünschte Produkt auf einem Rechner ohne CD-ROM- Laufwerk installiert werden soll, ist es notwendig, das gewünschte Pro- dukt von der CD auf Disketten zu kopieren. Dann kann das Produkt durch Aufruf von SETUP.EXE auf der ersten Diskette installiert werden.		
Kopieren des gewünschten Produktes auf Disketten	Nachfolgend wird beschrieben, wie Sie das gewünschte Produkt von der beigefügten CD auf Disketten kopieren können:		
	Schritt	Beschreibung	
	1	Wechseln Sie auf der CD in das Verzeichnis des von Ihnen gewünschten Produkts. Dort befindet sich für jede Diskette, die Sie kopieren müssen, ein Verzeichnis mit der Bezeich- nung DISK1, DISK2 usw.	
		Beispiel: \SW\Fms_5412\Win98\DISK1	
	2	Kopieren Sie die Inhalte der Diskettenverzeichnisse auf einzelne Disketten.	

3.2 Hinweise zur Installation

Bildschirmschoner	Bei Einsatz eines Bildschirmschoners ist zu beachten, daß die Bear- beitung CPU-Zeit kostet und damit zu Überlast des Systems führen kann. Es sind Bildschirmschoner bekannt, bei denen Hauptspeicher- anteile nicht mehr freigegeben werden. Dadurch reduziert sich konti- nuierlich der nutzbare Hauptspeicher.
Viren-Scanner	Der Einsatz eines Viren-Scanners im laufenden Betrieb kann zur Stö- rung von Hardware-Erweiterungen führen.
	Es wird empfohlen, Virentests nicht während des Betriebs von TF-1413/Windows 98 auszuführen. Nach dem Virentest sollte der Rechner rückgesetzt werden, bevor Sie eine Prozeßkopplung aktivie- ren.
Bei der Installation beachten	Bitte stellen Sie sicher, daß vor der Installation des vorliegenden Produkts keine Applikationen gestartet werden, die bereits installierte SIMATIC NET-Komponenten nutzen.
ج	ACHTUNG!!!
	Falls bei der Installation des vorliegenden Produkts auszutau- schende Software-Komponenten in Gebrauch sind, so werden sie nicht ersetzt. Dies führt zu einer unvollständigen Installation, was sich anschließend in Betriebsstörungen äußern kann.
Installation im selben Laufwerk	Falls Sie bereits ein SINEC- oder SIMATIC NET-Produkt installiert haben, sollten Sie die neue Installation unbedingt auf dem selben Laufwerk durchführen!
Die Anwendung "Sim9Sync"	Nach der Installation unter Windows 98 läuft im Hintergrund ständig die Anwendung "Sim9Sync".
CF -	Beenden Sie diese Anwendung keinesfalls. Das Produkt kann ohne diese Anwendung nicht korrekt arbeiten.

Windows 98 Plug and Play	Bei der Installation sucht Windows 98 für den CP 1413 freie Ressour- cen (Interrupt, E/A-Bereich, RAM-Adresse). Wenn Ihr PC nicht Plug-and-Play-fähige Komponenten enthält und diese ihren Ressourcen-Bedarf Windows 98 auch nicht bekannt ge- macht haben, kann es zu Konflikten kommen. Dies erkennen Sie dar- an, daß bei der Konfiguration oder beim Neustart von Windows 98 ein Fenster aufgeblendet wird, das einen Konflikt meldet.
	In diesem Fall sollten Sie mit dem Gerätemanager dem CP 1413 freie Ressourcen zuweisen (Task-Leiste Start → Einstellungen → Sy- stemsteuerung → System → Geräte-Manager → SIMATIC NE → TCP 1413 → Eigenschaften → Ressourcen). Deaktivieren Sie dazu den Knopf "automatisch einstellen" und wählen Sie "Basiskonfiguration 1".
	Bei der manuellen Zuordnung von Ressourcen mit dem Gerätemana- ger können Sie auch Ressourcen zuweisen, die Windows 98 als belegt erkannt hat, aber deren Eigentümer es nicht kennt.
	Um freie Ressourcen zu bekommen, kann es notwendig sein, andere Geräte zu entfernen oder zu deaktivieren.
Übernahme von MS-DOS oder Windows-3.x-	Falls nicht benötigt, entfernen Sie bitte aus der Datei CONFIG.SYS den Eintrag DEVICE=\EMM386.EXE (Anschließend Rechner bitte neu starten).
Installationen in Windows 98	Damit gewinnen Sie zusätzliche Speicherbereiche, die Windows 98 externen Geräten zuweisen kann.
	Vorhandene SINEC-Installationen für Windows 3.11 sind mit Windows-98-Produkten nicht kompatibel. Entfernen Sie gegebenen- falls unter Windows 98 in der AUTOEXEC.BAT den Eintrag "CALL SINECINI.BAT". Falls Sie Windows 3.11 starten, wird eine andere AUTOEXEC.BAT benutzt, Ihre Windows-3.x-Einstellungen gehen also nicht verloren.

Speicherbereiche	Bei der Installation des CP 1413 in der Konfigurationsmaske "CP in- stallieren" ordnet Windows 98 dem CP einen der folgenden physikali- schen Speicherbereiche zu:
	 64 Kbyte im unteren Speicherbereich (entweder D 0000н bis D FFFFн oder E 0000н bis E FFFFн)
	 256 Kbyte in einem durch das BIOS freigeschalteten Speicherloch in der Regel im 15. Mbyte (z. B. SNI PCD 5T PCI mit Board D823 oder D841; nicht von jedem Rechner unterstützt)
	 Zugang zum ISA-Bus durch Zugriff auf eine Adresse oberhalb des aktuellen Speicherausbaus (Vorzugslösung bei Programmiergerä- ten, z. B. PG 740 oder PG 760; nicht von jedem Rechner unter- stützt).
	Falls Windows 98 keinen der obigen Speicherbereiche zuordnen konnte oder falls der Treiber beim Systemstart meldet, daß der Spei- cher anderweitig belegt ist, hat Ihr Systemadministrator folgende Mög- lichkeiten, um den Betrieb des CP 1413 doch noch zu ermöglichen:
	 Nicht benötigte Komponenten, die am ISA-Bus Speicher belegen, aus dem System entfernen. Hierdurch wird der Speicher für den CP 1413 verfügbar.
	 Falls noch nicht geschehen und von Ihrem Rechner unterstützt, ein geeignetes Speicherloch (mindestens 256 Kbyte) im 15. Mbyte über das BIOS definieren.
Büro- kommunikation	Die notwendigen Einstellungen für die Bürokommunikation können in der Maske "Netzwerk" vorgenommen werden (Task-Leiste Start → Einstellungen → Systemsteuerung → Netzwerk). Die Bedienung dieser Maske wird im Benutzerhandbuch von Microsoft Windows 98 und in der Online-Hilfe erklärt.
Parallelbetrieb mit dem Produkt "SOFTNET IE PG/S7"	Das Netzwerkprotokoll "SIEMENS Industrial Ethernet (ISO)" des Pro- duktes "SOFTNET IE PG/S7" ist nicht über die Baugruppe CP 1413 ablauffähig, da die Baugruppe diese Funktionalität bereits enthält.

3.3 Start

Start der SW- Installation	Die Installation der Software muß mit dem mitgelieferten Installations- programm erfolgen, da ein Teil der Software komprimiert auf der CD vorliegt.	
	Zur Software-Installation gehen Sie bitte wie folgt vor:	
\checkmark	Starten Sie Ihren Rechner mit MS-Windows 98.	
\checkmark	Legen Sie die SIMATIC NET-CD in Ihr CD-ROM-Laufwerk ein.	
\checkmark	Starten Sie die Datei SETUP.EXE auf Ihrer CD.	
\checkmark	Folgen Sie den Anweisungen des Installationsprogramms.	
\checkmark	Aktivieren Sie in dem Dialog "Produktauswahl" die Kontrollkästchen für die Produkte, die Sie installieren wollen.	





Weiteres Vorgehen Nach der Software-Installation erfolgt die Baugruppenkonfiguration, bei der Sie einen CP installieren und ihm Ressourcen zuordnen. Danach erfolgt die Software-Konfiguration, bei der Sie einen Zugangspunkt für die Applikation erstellen und diesem eine Schnittstellenparametrierung zuordnen.

F

3.4 Konfiguration

Vorbereitung der Baugruppen- konfiguration	Nach der Übertragung der Software auf Ihre Festplatte starten Sie bitte das Konfigurationsprogramm, um den CP 1413 zu konfigurieren, falls es nicht automatisch gestartet wurde.	
Ê	Falls Sie bereits einen CP 1413 in Ihrem Rechner unter Windows 98 installiert haben und nur ein zusätzliches Software-Paket be- treiben wollen, können Sie sofort zur Konfiguration der Software übergehen.	

Wie gelange ich in das Konfigurationsprogramm? In das Konfigurationsprogramm mit dem Dialogfeld "Schnittstellen installieren/deinstallieren" können Sie über drei Wege gelangen:

- Über das Setup-Programm, wenn Sie im letzten Dialogfeld des Setup-Programms die Option "Ja, Konfigurations-Programm jetzt starten" gewählt haben.
- Über den SIMATIC-Pfad (Task-Leiste Start → Simatic → SIMATIC NET → PG-PC-Schnittstelle einstellen).
- Über die Systemsteuerung von Windows 98 (Task-Leiste Start → Einstellungen → Systemsteuerung → PG/PC-Schnittstelle einstellen).

PG/PC-Schnittstelle einstelle	en (V5.0) 🛛 💌
Zugriffsweg Step 7 Projektierung	
Zugangspunkt der Applikation:	
CP_H1_1:> CP1413	•
(für CP1413 SIMATIC NET)	
Benutzte Schnittstellengarametrierung:	
CP1413 <aktiv></aktiv>	<u>E</u> igenschaften
<pre>kkeine> CD1412_c4kkis</pre>	Diagnose
TCP/IP -> 3Com Fast EtherLink XL	Kopieren
	Löschen
(Parametrierung Ihres Kommunikationsprozessors CP 1413 für Industrial Ethernet)	
Schnittstellen	
Hinzufügen/Entfernen:	<u>A</u> uswählen
	Abbrechen Hilfe

CP-Angabe und die Bezeichnung "SubBoard" In der Auswahlliste werden Ihnen CP angeboten, die teilweise in Ihrer Beschreibung die Bezeichnung "SubBoard" tragen. Dieser Eintrag steht im Zusammenhang mit **Interrupts**.

Mehrere CP in einem Rechner können **einen Interrupt gemeinsam nutzen** (Shared Interrupt). Der erste CP (**ohne** Bezeichnung "Sub-Board") belegt den Interrupt im Rechner. Die folgenden CP (**mit** Bezeichnung "SubBoard") nutzen den Interrupt des ersten CP mit.

Informationen zu Hardware-Ressourcen Freie Ressourcen (Interrupt, E/A-Bereich, RAM-Adresse) können unter Windows 98 mit dem Gerätemanager bestimmt werden (Task-Leiste Start → Einstellungen → Systemsteuerung → System → Gerätemanager → Eigenschaften).

Eigenschaften von System	?	×
Alloemein Geräte-Manager Hardwareprofile Leistungsmerkmale		
		1
Modelle nach Typ anzeigen C Modelle nach Anschluss anzeigen		
Computer		
庄 🚽 Anschlüsse (COM und LPT)		
🗄 👜 🖓 CD-ROM		
🖶 🛁 Diskettenlaufwerk-Controller		
Estplattencontroller		
🕀 🖳 🕎 Grafikkarten		
i Laufwerke		
i maus		
🗄 🖷 🖳 Monitore		
Emer Big Netzwerkkarten		
E SCSI-Controller		
EP 1413, Board 1		
Systemkomponenten		
<u>Eigenschaften</u> <u>Aktualisieren</u> <u>Entfernen</u> <u>D</u> rucken		
Schließen Abbred	her	1

Vorgehen bei der Baugruppenkonfiguration

Nachdem das Konfigurationsprogramm gestartet ist, fahren Sie wie folgt angegeben fort:

Schritt	Vorgehen
1	Betätigen Sie die Schaltfläche "Installieren"
2	Wählen Sie in dem Listenfeld Auswahl einen CP 1413 aus.
	Bei mehreren installierten CP ist der erste CP ohne die Bezeichnung "SubBoard" zu wählen und die anderen CP mit der Bezeichnung "SubBoard".
E.	Bitte beachten Sie, daß stets ein CP installiert sein muß, der nicht "SubBoard" ist, da sich SubBoard- CPs den Interrupt mit einem Nicht-SubBoard-CP tei- len.
3	Betätigen Sie die Schaltfläche "Installieren ->"
	Schnittstellen installieren/deinstallieren Auswahl: CP1413 CP1413 CP5412A2 TCP/IP <
4	In der Maske "Ressourcen" finden Sie unter dem Eintrag "E/A-Bereich" die Angabe eines Wertepaares, z. B. 03E0н - 03E7н. Merken Sie sich den Wert, Sie benötigen ihn zur Einstellung des E/A-Bereichs des CP 1413.

Interrupt und Speicherbereich

Die Parameter "Interrupt" und "Speicherbereich" werden durch die Plug-and-Play-Funktion des Betriebssystems automatisch festgelegt und sollten nur im Ausnahmefall vom Anwender manuell in der Systemkonfiguration geändert werden.

Konfiguration der Software

Nachdem Sie die Hardware-Parameter festgelegt haben, müssen Sie die Software für den CP 1413 konfigurieren.



Nach der Hardware-Konfiguration gelangen Sie automatisch zurück zum Register "Zugriffsweg", in dem Sie die Software konfigurieren können.

Vorgehen bei der Software-Konfiguration

Fahren Sie in dem Register "Zugriffsweg" wie in folgender Tabelle aufgeführt fort:

Schritt	Vorgehen
1	Wählen Sie in dem Listenfeld "Zugangspunkt der Applika- tion" einen Zugangspunkt aus.
	Sie können auch durch Auswahl des Eintrags " <hinzufü- gen/Löschen>" einen neuen Zugangspunkt erstellen.</hinzufü-
2	Wählen Sie in dem Listenfeld "Benutzte Schnittstellenpa- rametrierung" eine Schnittstellenparametrierung aus.
3	Konfigurieren Sie die gewählte Schnittstellenparametrie- rung über die Schaltfläche "Eigenschaften".
4	Wiederholen Sie die Schritte 1, 2 und gegebenenfalls Schritt 3 für weitere Zugangspunkte.
5	 Beenden Sie das Konfigurationsprogramm mit OK, um Ihre Zuordnung zu speichern, mit Abbrechen, um keine neuen Zuordnungen zu speichern.

s,

Falls einer Baugruppe kein Zugangspunkt zugeordnet wurde, ist kein Betrieb der Baugruppe möglich.

Vorbereitung für die Installation der Hardware	Zur Installation des CP 1413 benötigen Sie den bei der Hardware- Konfiguration festgelegten Wert für den E/A-Bereich des CP 1413. Falls Sie sich den Wert bei der Hardware-Konfiguration nicht gemerkt haben, können Sie ihn wie folgt ermitteln:
✓	 Wählen Sie entweder: über den Startknopf "Einstellungen / Systemsteuerung" oder klicken Sie auf die Ikone "Arbeitsplatz" und anschließend auf die Ikone "Systemsteuerung".
\checkmark	Klicken Sie auf die Ikone "System" und wählen Sie das Register "Ge- räte-Manager".
\checkmark	Wählen Sie mit Doppelklick die Ikone "SIMATIC NET".
\checkmark	Wählen Sie unter den angezeigten Baugruppen die neu zu installie- rende aus und klicken Sie auf die Schaltfläche "Eigenschaften".
\checkmark	Wählen Sie das Register Ressourcen.
\checkmark	Unter dem Eintrag E/A-Bereich finden Sie die Angabe eines Wertepaa- res, z. B. 03E0H - 03E7H. Merken Sie sich den Wert, Sie benötigen ihn zur Einstellung des E/A-Bereichs des CP 1413.
Installation der Hardware	Zur Installation des CP 1413 benötigen Sie den bei der Hardware- Konfiguration festgelegten Wert für den E/A-Bereich.
1	Lesen Sie die Installationsanleitung des CP 1413. Sie befindet sich im Anhang (Kapitel 5).
\checkmark	Stellen Sie den vorgeschlagenen E/A-Bereich beim CP 1413 ein und installieren Sie die Baugruppe gemäß der Anleitung.
Starten des Treibers	Bei jedem Wiederanlauf des Rechners werden die von Ihnen aktivier- ten Protokolle automatisch gestartet.

Neuanlauf und Rücksetzen einer Baugruppe	Der Neuanlauf und das Rücksetzen einer Baugruppe im Register "Be- triebszustand" ist nur bei aktiver Schnittstellenparametierung möglich. Nach dem Verlassen des Konfigurationsprogramms wird die zuletzt angewählte Schnittstellenparametrierung beim nächsten Start des Konfigurationsprogramms aktiv gesetzt.
¢\$	Folgender Eintrag in "Benutzte Schnittstellenparametierung" darf nicht verwendet werden: "ISO Ind.Ethernet →SIMATIC NET NDIS-Ether"-
	<i>"</i>
Einstellungen für STEP 5	Bei der Schnittstellenparametrierung ist für den STEP 5 Betrieb der Zugangspunkt der Applikation "CP_H1_1:" der Baugruppe "CP 1413" zuzuordnen.

3.5 Betrieb von PC-Netzen

NetzbetriebParallel zu den Automatisierungsprotokollen können Sie mit dem
CP 1413 unter Windows 98 auch PC-Netze betreiben.

Installation Wenn Sie die Netzwerkfunktion von TF-1413/Windows 98 installieren wollen, gehen Sie bitte wie folgt beschrieben vor:

Schritt	Beschreibung
1	Rufen Sie über die Systemsteuerung die Netzwerkkon- figuration von Windows 98 auf (Task-Leiste Start → Einstellungen → Systemsteuerung → Netzwerk).
2	Wählen Sie im Register "Konfiguration" die Schaltfläche "Hinzufügen".
3	Wählen Sie als zu installierende Netzwerkkomponente "Netzwerkkarte" aus.
4	Betätigen Sie die Schaltfläche "Hinzufügen".
5	Wählen Sie in der Liste der angegebenen Hersteller "SIEMENS AG" aus.
	Netzwerkkarten auswählen Klicken Sie auf die Netzwerkkarte, die Ihrer Hardware entspricht, und anschließend auf "OK". Wenn Sie über eine Installationsdiskette für die Komponente verfügen, klicken Sie auf "Diskette". Hersteller: Netzwerkkarten: BRPTI SIECOM Silicom Silicom Socket Communications Diskette Diskette Diskette
6	Betätigen Sie die Schaltfläche "OK".
7	Die weitere Installation erfolgt analog zu anderen Netz- werkkarten.

Parallelbetrieb mit TF-1413/ Windows 98	Wenn Sie über den CP 1413 PC-Netze betreiben, achten Sie bitte darauf, daß die in einer TF-Datenbasis angegebene Ethernet-Adresse mit der im Konfigurationsprogramm des CP 1413 grau angezeigten Ethernet-Adresse übereinstimmt. Um diese Angabe ändern zu können, müssen Sie temporär das TF-Protokoll abschalten. Falls die Ethernet- Adressen nicht übereinstimmen, kann es zu Verbindungsstörungen beim Betrieb der PC-Netze kommen.
Unterstützung von Novell-Netzen	Der CP 1413 unterstützt nicht das automatische Erkennen von Frame- Formaten. Bitte stellen Sie das von Ihnen verwendete Frame-Format für die SIMATIC NET CP 1413-Netzwerkkarte (Adapter) über die Netzwerkkonfiguration von Windows 98 ein.
Deinstallation	Bitte deinstallieren Sie die SIMATIC NET CP 1413-Netzwerkkarte (Ad- apter) über die Netzwerkkonfiguration von Windows 98, bevor sie das vorliegende Produkt deinstallieren.

4 Wo Sie Hilfe bekommen

4.1 Hilfe bei technischen Fragen

Dokumentation	Themen zur Nutzung der vorliegenden Software finden Sie in den fol- genden Informationsquellen:	
	 in der zugehörigen Papierdokumentation 	
	• in der in die Software Integrierten Hilfe (Taste F1)	
	 in Text- und PDF-Dateien der SIMATIC NET-CD 	
	• in folgenden Handbüchern des Automatisierungssystems S7-400 H	
	 Hochverfügbare Systeme 	
	 Hardware konfigurieren und Verbindungen projektieren mit STEP 7 V5.0 	
	 Programmieren mit STEP 7 V5.0 	
Ansprechpartner	Sollten Sie in den angegebenen Informationsquellen keine Antworten auf technischen Fragen zur Nutzung der beschriebenen Software erhalten, wenden Sie sich bitte an Ihren Siemens- Ansprechpartner in den für Sie zuständigen Vertretungen oder Geschäftsstellen.	
	Die Adressen finden Sie:	
	in unserem Katalog IK 10	
	 im Internet (http://www.ad.siemens.de/net) 	
	 in der Datei "LIESMICH.TXT" im Hauptverzeichnis der SIMATIC NET-CD 	
Kurse und weitere Unterstützung	Zum Thema hochverfügbare SIMATIC S7-Automatisierungssysteme bietet das H/F-Competence-Center in Nürnberg einen speziellen Workshop an. Außerdem unterstützt Sie das H/F-Competence-Center auch bei der Projektierung, bei der Inbetriebsetzung und bei Proble- men vor Ort.	
	Weitere Informationen erhalten Sie unter:	
	 Telefon: +49 - 911 - 895 - 4759 (innerhalb Deutschlands 0911 - 895 - 4759) 	
	 Telefax: +49 - 911 - 895 - 4519 (innerhalb Deutschlands 0911 - 895 - 4519) 	

Häufige FragenInformationen und Antworten auf häufig gestellte Fragen bietet
Ihnen unser Customer Support im Internet. Hier finden Sie im
Bereich FAQ (Frequently Asked Questions) Informationen rund um
unser Produktspektrum.

Die Adresse der SIMATIC NET-Homepage im World Wide Web des Internets lautet:

http://www.ad.siemens.de/net

SIMATIC Customer Support Hotline

Weltweit jederzeit erreichbar:



Nürnberg	SIMATIC Premium-Hotline
SIMATIC BASIC-Hotline	(kostenpflichtig, nur mit SIMATIC Card)
Ortszeit: Mo bis Fr 8:00 bis 18:00 Uhr (CET) Telefon: +49 (911) -895-7000 Fax: +49 (911) -895-7002 E-Mail: simatic.support@nbgm.siemens.de	Ortszeit: Mo bis Fr 0:00 bis 24:00 Uhr (CET) Telefon: +49 (911) -895-7777 Fax: +49 (911) -895-7001

Johnson City	Singapur
SIMATIC BASIC-Hotline	SIMATIC BASIC-Hotline
Ortszeit: Mo bis Fr 8:00 bis 17:00 Uhr	Ortszeit: Mo bis Fr 8:30 bis 17:30 Uhr
Telefon: +1 423 461-2522	Telefon: +65 740-7000
Fax: +1 423 461-2231	Fax: +65 740-7001
E-Mail: simatic.hotline@sea.siemens.com	E-Mail: simatic.hotline@sae.siemens.com.sg

Autorisierungs-	Bei Problemen mit der Autorisierung können Sie sich an unsere Auto-
Hotline	risierungs-Hotline wenden:

- Telefon: +49 911 895 7200 (innerhalb Deutschlands 0911 - 895 - 7200)
- Telefax: +49 911 895 4212 (innerhalb Deutschlands 0911 - 895 - 4212)

4.2 Ansprechpartner für SIMATIC NET-Schulung

KursanmeldungSiemens AG
Trainings-Center für Automatisierungstechnik
A&D PT 49 KursbüroÖstliche Rheinbrückenstraße 50
76181 KarlsruheTelefon+49 - 721 - 595 - 2917
(innerhalb Deutschlands 0721 - 595 - 2917)Fax+49 - 721 - 595 - 6987
(innerhalb Deutschlands 0721 - 595 - 6987)

5 Anhang - Installationsanleitung des CP 1413

Beschreibung CP 1413	Der CP 1413 ist eine Steckkarte für IBM-AT-kompatible PC/PG und benötigt für den Betrieb einen 16-Bit-breiten ISA-Slot.
¢\$F	Bitte beachten Sie beim Einbau der Baugruppe die Maßnahmen gegen elektrostatische Aufladung (EGB).
£₽	Das Öffnen des PC/PG sowie das Stecken und Ziehen der Bau- gruppe ist nur im spannungslosen Zustand erlaubt.
¢\$F	Bitte lesen Sie vor dem Einbau der Baugruppe im Handbuch Ihres PC/PG das Kapitel "Einbau von Baugruppen" o. ä. ganz durch und beachten Sie die Anweisungen.
Konfigurations- register	Über das Konfigurationsregister werden sämtliche, für den Betrieb der Baugruppe benötigten Werte, über die Software auf den CP geladen. Das Konfigurationsregister belegt vier Adressen im Ein-/Ausgabe- bereich (auch E/A-Bereich genannt) des PC. Die 8 Adressen, die be- legt werden, werden über Steckbrücken eingestellt. Die Lage der Steckbrücken auf der Baugruppe ist Bild 5.1 zu entnehmen.

Lageplan des CP 1413 Das nachfolgende Bild zeigt den CP 1413 mit der Lage der Brücken zur Einstellung des E/A-Bereichs.





Einstellung der Steckbrücke

Die folgende Tabelle zeigt die möglichen Brückenbelegungen auf dem CP 1413; Standardeinstellung: beide Brücken gesteckt.

E/A-Bereich (hex.)	X3 / 1-2	X3 /3-4
03E0-03E7	0-0	0-0
0390-0397	0-0	0 0
0100-0107	0 0	0 0

S

Der angewählte E/A-Bereich darf von keiner anderen Steckkarte belegt sein.

Weitere Voraussetzungen

Für den Betrieb mit der entsprechenden Software wird ein freier Speicherbereich von mindestens 64 Kbyte benötigt. Falls die Anfangsadresse oberhalb von 1 Mbyte liegt, werden 256 Kbyte benötigt.

Der CP 1413 belegt einen der folgenden Interrupts:

Mögliche Interrupt- Nummern	5	10	12	15
--------------------------------	---	----	----	----

Diese Einstellungen erfolgen erst bei der Installation der entsprechenden Software und werden dort ausführlich behandelt.

Folgende Tabelle zeigt die standardmäßige Interupt-Belegung eines Rechners:

Interrupt	Belegung
IRQ 5	Soundkarte, MPI-Karten
IRQ 10	Netzwerkkarten, SCSI Controller
IRQ 12	PS2 Mouse
IRQ 15	Die Festplatten-Controller, SCSI Controller

Sollten alle möglichen Interrupts durch die oben genannte Hardware belegt sein, müssen Sie eine Hardwarekomponente umrangieren (Treiber-Software der Hersteller) oder nicht benötigte Hardware entfernen bzw. im BIOS ausschalten.

5.1 Probleme bei Vergabe der Hardware Ressourcen

Sollten Fehler beim Neustart der Baugruppe oder des Rechners gemeldet werden, stehen Ihnen folgende Diagnosemöglichkeiten zur Verfügung:

- Meldungen des Simatic Net Monitors
- Meldung der PG/PC Schnittstelle
- Kontrolle der BIOS Einstellungen

Meldungen des Simatic Net	Der Simatic Net Monitor erscheint nur im Fehlerfall und verweist meist auf Konflikte bei den Hardware Ressourcen.
Monitors	Kontrollieren Sie die eingestellten Hardware-Parameter (IRQ, Spei- cherbereich, E/A).
BIOS Einstellungen	Falls auf Ihrem System keine freien Ressourcen zur Verfügung stehen, müssen Sie die BIOS Einstellungen kontrollieren.
	Auf den folgenden Seiten werden die notwendigen Änderungen für verschiedene BIOS beschrieben

Diese Einstellung muß bei Benutzung der Speicherbereiche F0....,F4.... und F8.... unbedingt aktiviert (Enabled, Extended) geschaltet sein.

AWARD BIOS:

Aktivieren des

BIOS MEMORY

GAP's. (ISA-Memory-Hole, Memory Hole at 15M-16M)

Memory Hole At 15M-16M auf Enable schalten

Auto Configuration DRAM Timing	Memory	Parity/ECC Che	ck	Disable	5
DRAM RAS# Precharge Time	L2 Cach	e Cacheable Si	ze	:64MB	
DRAM R/W Leadoff Timing	Chipset	NA# Asserted		Enabled	3
Fast RAS# To CAS# Delay					
DRAM Read Burst (EDO/FPM)					
DRAM Write Burst Timing					
DRAM Speculative Leadoff					
Turn-Around Insertion					
ISA Clock					
Turbo Read Leadoff					
System BIOS Cacheable					
Video BIOS Cacheable					
8 Bit I/O Recovery Time					
16 Bit I/O Recovery Time					
Memory Hole At 15M-16M	ESC	:Quit	(B)	:Select	Item
Peer Concurrency	Fl	:Help	PU/PD/+/-	:Modify	
Chipset Special Features	F5	:Old Values	(Shift)F2	:Color	
DRAM ECC PARITY Select	F6	:Load BIOS Def	aults		
	F7	:Load Setup De	faults		

PHOENIX BIOS:

ISA MEMORY GAP auf Extended schalten

Main Advanced Sec	urity Power	Exit
Advanced Syst	em Configuration	Item Specific Help
ISA Memory Gap: PCI Bus Parity Checking: ECC Memory Checking	[Extended] [Disabled] [Enabled]	If enabled, turn system RAM off to free address space for use with an option card.m A 1M extended memory gap, starting at 15M, will be created in system RAM.

Power Management auf Disabled schalten

Bei aktiviertem Power Management reagiert der Rechner verlangsamt. Dies kann sogar zum Timeout führen.

AWARD BIOS:

Power Management auf Disable schalten

Power N	lanagement	:Disable	** Powe	r Down & Resum	ne Events **	
PM Cont	rol by APM	:Yes	IRQ3	(COM 2)		:ON
Video ()ff Method	:V/H	IRQ4	(COM 1)		:ON
		SYNC+Blank				
CPU Far	n Power Green	:Enabled	IRQ5	(LPT 2)		:OFF
MODEM U	Jse IRQ	:3	IRQ6	(Floppy Disk)		:ON
			IRQ7	(LPT 1)		:ON
Doze Mo	ode	:Disable	IRQ8	(RTC Alarm)		:OFF
Standby	/ Mode	:Disable	IRQ9	(IRQ2 Redir)		:ON
Suspend	l Mode	:Disable	IRQ10	(Reserved)		:ON
HDD Pov	ver Down	:Disable	IRQ11	(Reserved)		:ON
			IRQ12	(PS/2 Mouse)		:ON
** Wake	e Up Events In Do	ze & Standby **	IRQ13	(Coprozessor)		:ON
IRQ3	(Wake-Up	:ON	IRQ14	(Hard Disk)		:ON
	Event)					
IRQ4	(Wake-Up	:ON	IRQ15	(Reserved)		:ON
	Event)					
IRQ8	(Wake-Up	:OFF				
	Event)					
IRQ12	(Wake-Up	:ON	ESC	:Quit	(®(:Select Item
	Event)					
			Fl	:Help	PU/PD/+/-	:Modify
			F5	:Old Values	(Shift)F2	:Color
			F6	:Load BIOS De	faults	
			F7	:Load Setup D	efaults	

PHOENIX BIOS:

APM und Power Management auf Disabled schalten

Main Advanced	Security Power	Exit	
			Item Specific Help
APM:	[Disabled]		Enables or disables
Power Management Mode:	[Disabled]		Advanced Power Management
Standby Timeout:	[Disabled]		5
Suspend Timeout:	[Disabled]		
Suspend Mode:	[Suspend]		
Hard Disk Timeout:	[Disabled]		
Resume On Time:	[Off]		
Resume Time:	[00:00:00]		
8 Activity Detection			

Aktivieren der Reset Configurtation Data und Einstellungen der Betriebssystem Art AWARD BIOS:

In der uns vorliegenden BIOS-Version ist die Plug & Play Option vom User nicht einstellbar (Änderungen vorbehalten).

PHOENIX BIOS:

Option Plug & Play OS auf NO schalten

Main Advanced Security	Power Exit	
		Item Specific Help
Setting items on this menu to inc	orrect values	
may cause your system to malfunct	ion.	Select ´Yes´ if you want to clear the
8 Cache Memory		System Configuration
8 Peripheral Configuration		Data
8 PCI Configuration		
8 Advanced System Configuration		
8 Power On/Off		
Plug & Play O/S: Reset Configuration Data: Lock Setup Configuration:	[NO] [YES] [NO]	
Large Disk Access Mode:	[DOS]	

F

Bitte lesen Sie die Installationsanweisungen der zum Einsatz kommenden Software ganz durch und befolgen Sie die Anweisungen.





SIMATIC NET

Installation Instructions

C79000-B8274-C386-02

Release 2 1999

TF-1413/Windows 98

C79000-B8274-C386-02 © SIEMENS AG 1999 Subject to change

Warning

StartupPrior to startup read the relevant documentation. For ordering data of
the documentation please refer to catalogs or contact your local
SIEMENS representative.

Do not start up until you have established that the machine on which you intend to run these components complies with the directive 89/392/EEC.

Notes for the Reader

Text Conventions	The following symbols are used in the text to draw attention to important points.
- Star	This symbol highlights important features and dangers.
\checkmark	This symbol indicates an activity for you to perform.
	Please work through the instructions marked by a check mark in the order shown.
De sistera d	

RegisteredSIMATIC, SIMATIC NET and SINEC are registered trademarks ofTrademarksSiemens AG. Third parties using for their own purposes any other
names in this document which refer to trademarks might infringe upon
the rights of the trademark owners.

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility or design, are reserved.

We have checked the contents of this manual for agreement with the hardware described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual are reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcome.

© SIEMENS AG 1996 to 1999 All rights reserved

Technical data subject to change.

Overview

```
Products
```

These installation instructions describe the installation of the following product: TF-1413/Windows 98

Contents

1	Requirements	41
1.1	Hardware- Requirements	
1.2	Software- Requirements	42
2	Hardware Restrictions	
2.1	Computers with an SCSI Controller	43
3	Software Installation	
3.1	First Steps	
3.2	Installation Notes	45
3.3	Start	
3.4	Configuration	
3.5	Operating PC Networks	57
4	How to Get Help	
4.1	Help with Technical Questions	
4.2	Who to Contact for SIMATIC NET Training	62
5	Appendix - Installation Instructions for the CP 1413	63
5.1	Problems Assigning Hardware Resources.	65

1 Requirements

1.1 Hardware- Requirements

Computer	The product TF-1413/Windows 98 can only be used on AT-compatible PCs with an ISA slot.
(F	Please read the README.TXT file on the SIMATIC NET CD.
CP 1413	To operate the package, you require a CP 1413 SIMATIC NET communications processor. When you install the CP 1413, set its I/O range as proposed by the installation procedure. If you install several CPs, make sure that a different I/O range is set on each CP.
I/O Range	Every CP 1413 occupies four consecutive addresses of the I/O address area starting at a selectable base address. The following base addresses (hexadecimal) are available:
	100, 390 and 3E0.
	How to set the address (with jumper settings) is described in Chapter 5, "Appendix - Installation Instructions for the CP 1413".
	The Plug-and-Play functions of Windows 98 automatically select a free I/O range. You should therefore first install the software to obtain a free I/O range. You then set this range on the CP 1413 before installing it.

1.2 Software- Requirements

Operating System	The product requires Windows 98 or higher as operating system.
Interrupt	Each CP 1413 requires one interrupt for operation. This can be set in the software. Make sure that one of the following interrupts on your system is free for the CP 1413:
	IRQ 5, IRQ 10, IRQ 12, IRQ 15
	The Plug-and-Play functions of Windows 98 automatically select one of the interrupts listed above.
Dual-port RAM Address Area	Each CP 1413 occupies a DPRAM memory area of at least 64 Kbytes during operation. The location of the area is set in the configuration program.
	The Plug-and-Play functions of Windows 98 automatically select a suitable DPRAM memory area.
Ê	On some computer models with a memory configuration greater than 16 Mbytes, access to the ISA bus is only possible in areas D 0000H - D FFFFH or E 0000H - E FFFFH. You may have to change settings in the BIOS of your computer. For more information, read the BIOS description of your computer.
C B	If you use a memory management program, for example EMM386, you must inform the management program of the memory area you are using. With EMM386, for example, you would either add the following line to the CONFIG.SYS file
	Device=C:\DOS\EMM386.EXE X=D000-DFFF
	or modify the line if it already exists. For further options, please refer to your operating system manual and the memory manager you are using.
SIMATIC NET-CD	The program package is shipped along with other SIMATIC NET products on a CD-ROM.
Memory Requirements on the Hard Disk	During installation, the space required by the software package is displayed and the destination drive is checked to make sure there is sufficient space.

2 Hardware Restrictions

2.1 Computers with an SCSI Controller

If the memory ranges of the CP and the SCSI controller overlap, this can result in a memory error that will cause Windows to crash. To restart Windows successfully, at least one of the drivers involved must be removed or deactivated. Check with your system administrator about the best course of action.

- An overlap of the memory areas may also destroy the data on the hard disk.
- If the SCSI controller is located on the motherboard, it is possible that the BIOS will be deleted if memory ranges overlap. In this situation, we therefore recommend that you use the higher memory ranges for the CP 1413 or CP 5412 (A2).

3 Software Installation

3.1 First Steps

Preparations for Software	To prepare for software installation, follow the steps below:		
Installation	Read the	README.TXT file on the CD.	
\checkmark	Read thes	se installation instructions thoroughly.	
Installation from	The produ	uct you require is on the CD.	
CD	Under Wi SETUP.E	ndows 98 and Windows NT, you install the product using the XE installation program in the main directory of the CD.	
Installation from Diskettes	If you want to install the product on a computer without a CD drive, you must copy the product from the CD to diskettes. The product can then be installed by starting SETUP.EXE on the first diskette.		
Copying the Required Product to Diskettes	How to copy the required product from the CD to diskettes is described below:		
	Step	Description	
	1	Open the directory of the product you require on the CD. This directory contains a directory called DISK1, DISK2 etc. for each diskette.	
		Example: \SW\Fms_5412\Win98\DISK1	

2 Copy the contents of the diskette directories to individual diskettes.

3.2 Installation Notes

Screen Saver	If you use a screen saver, remember that processing the saver costs CPU time and this can lead to the system being overloaded. There are screen savers that are known to continue occupying parts of memory. This leads to a continuous reduction in the usable memory.
Virus Scanner	Using a virus scanner during operation can cause problems with hardware expansions.
	It is recommended that you do not run virus tests while TF-1413/Windows 98 is active. After a virus test, you should reset your computer before you activate an interface to the process.
Important Note about Installation	Before you install this product, please make sure that no other application has been started that uses existing SIMATIC NET components.
₹¥	CAUTION!!!
	If software components that would normally be replaced during installation of this product are already in use, they are retained and not replaced without any error message being displayed. This means that the installation is incomplete and you may encounter problems later during operation.
Installation on the Same Drive	If you have already installed a SINEC or SIMATIC NET product, you should always install the new product on the same drive!
The Application "Sim9Sync"	After installation under Windows 98, the application "Sim9Sync" runs constantly in the background.
CB-	Under no circumstances close this application. The product cannot function correctly without this application.

Windows 98 Plug and Play	During installation, Windows 98 searches for free resources for the CP 1413 (interrupt, input/output range, RAM address).
	If your PC includes components that do not have the Plug and Play capability and cannot indicate their required resources to Windows 98, conflicts can occur. If this is the case, a Window is displayed indicating a conflict during configuration or when you restart Windows 98.
	In this case, you should assign free resources to the CP 1413 using the device manager, as follows (taskbar Start → Settings → Control Panel → System → device manager → SIMATIC NET → CP 1413 → Properties → Resources). Deactivate the "Use automatic settings" check box and select "Basic configuration 1".
	During the manual assignment of resources using the device manager, you can also assign resources that Windows has detected as being in use but does not know the owner.
	To obtain free resources, it may be necessary to remove other devices or at least deactivate them.
Using MS DOS or Windows 3.x	If you do not require the entry DEVICE=\EMM386.EXE in the CONFIG.SYS file, please remove it and then reboot your computer.
Installations	This gains additional memory areas that Windows 98 can assign to external devices.
	Existing SINEC installations for Windows 3.11 are not compatible with Windows 98 products. If it exists, remove the entry "CALL SINECINI.BAT" in the AUTOEXEC.BAT file under Windows 98. If you start Windows 3.11, a different AUTOEXEC.BAT is used, this means that your Windows 3.x settings are not lost.

Memory Areas	When the CP 1413 is installed using the configuration dialog "Install CP", Windows 98 assigns one of the following physical memory areas to the communications processor:		
	 64 Kbytes in the lower memory area (either D 0000н to D FFFFн or E 0000н to E FFFFн) 		
	 256 Kbytes in a memory hole provided by the BIOS, usually in the 15th Mbyte (e. g. SNI PCD 5T PCI with a D823 or D841 board; not supported by some computers) 		
	 Access to the ISA bus by accessing an address above the current memory configuration (preferred solution for programming devices, e. g. PG 740 or PG 760, not supported by some computers). 		
	If Windows 98 was unable to assign any of the above memory areas, or if the driver reports that the memory is already being used, the following options are available to your system administrator to allow operation of the CP 1413:		
	• Components that are no longer required and that occupy memory on the ISA bus should be removed from the system. This provides the memory required by the CP 1413.		
	 If you have not already done so and your computer supports it, a suitable memory hole can be defined (at least 256 Kbytes) in the 15th Mbyte using the BIOS. 		
Office Communication	You can make the settings required for office communication in the "Network" dialog. (Taskbar Start → Settings → Control Panel → Network). How to use this dialog is explained in the Microsoft Windows 98 user's manual and in the online help.		
Parallel Operation with the Product "SOFTNET IE	The network protocol "SIEMENS Industrial Ethernet (ISO)" of the product "SOFTNET IE PG/S7" cannot run on the CP 1413 module since the module already has this functionality.		

PG/S7"

3.3 Start

F

Software

The software can only be installed with the supplied installation Starting the program since part of the software is compressed on the CD. Installation Follow the steps outlined below to install the software:

Start your computer with MS Windows 98.

Insert the CD in your CD drive.

Start the file SETUP.EXE on your CD

Follow the instructions displayed by the installation program.

Activate the check box for the products you want to install in the product selection dialog.

If you have already installed SIMATIC NET products, the "Update Options" dialog will be displayed during Setup. Since the parallel installation of SIMATIC NET products is approved only for the versions supplied on the same CD you should update all the SIMATIC NET products already installed on your computer.

SIMATIC NET -	Setup: Update Options There are already SIMATIC NET products installed on your PC. The following products are installed: SIMATIC NET DP-5412/Windows NT V5.1 SIMATIC NET DP OPC-SERVER V2.0 Image: State of the
	< <u>B</u> ack <u>N</u> ext > Cancel

Where to Go from
HereAfter you have installed the software, you configure the module by
installing a CP and assigning resources to it. You then configure the
software by creating the access point for the application and assigning
an Interface parameter to the access point.

3.4 Configuration

F

Preparations for
Configuration of
the HardwareAfter you have installed the software on your hard disk, start the
configuration program to configure the CP 1413 if it has not started
automatically.

If you have already installed a CP 1413 in your computer under Windows 98 and only want to operate an additional software package, you can skip this section and move on to configuration of the software.

How to Start the Configuration Program

You can start the configuration program with the "Install/Remove Interfaces" dialog box in three ways:

- Using the "setup" program if you select the option "Yes, start the configuration program now" in the last dialog box of the setup program.
- By navigating through the SIMATIC path (taskbar Start → Simatic → SIMATIC NET → Setting the PG-PC Interface).
- By navigating standard paths in Windows 98 (taskbar Start → Settings → Control Panel → Set PG/PC Interface).

Set PG/PC Interface (V5.0)	×
Access Path Step 7 Configuration	
Access Point of the Application:	
CP_H1_1:> CP1413	•
(for CP1413 SIMATIC NET)	
Interface Parameter Assignment Used:	
CP1413 <active></active>	P <u>r</u> operties
<none></none>	<u>D</u> iagnostics
TCP/IP -> 3Com Fast EtherLink XL	Сору
	Dejete
(Configuration of your Communications Processor CP 1413 for an Industrial Ethernet Network)	
Interfaces	
Add/Remove:	Sele <u>c</u> t
OK	Abbrechen Hilfe

Specifying the CP and the Identifier "SubBoard"

The hardware list displays CPs, some of which include the entry "SubBoard". This entry relates to **interrupts**.

Several CPs on one computer can **share one interrupt**. The first CP (**without** the entry "SubBoard") occupies the interrupt on the computer. The following CP (**with** the entry "SubBoard") shares the interrupt of the first CP.

Information on Hardware Resources

You can find out which resources are free (interrupt, I/O range, RAM address) under Windows 98 with the device manager (taskbar Start → Settings → Control Panel → System → Device Manager → Properties).

System Properties
General Device Manager Hardware Profiles Performance
View devices by type View devices by connection
Ere Disk drives
🗄 🖳 🛄 Display adapters
E - Floppy disk controllers
Hard disk controllers
I III IIII Mouse
田·明 Network adapters
E CSI controllers
SIMATIC NET
CP 1413, Board 1
System devices How How controller
Properties Refresh Remove Print
OK Cancel

How to Configure the Hardware

Once you have started the configuration program, follow the steps outlined below:

Step	Procedure
1	Click the "Select" button.
2	Select a CP 1413 from the "Selection:" list box. If you have more than one CP installed, select the first CP that does not have the entry "SubBoard" and the other CP with the entry "SubBoard".
Æ	Please remember that one CP must be installed that is not the "SubBoard" since the SubBoard CPs share the interrupt with a non-SubBoard.
3	Click the "Install ->" button.
	Install / Remove Interfaces Selection: CP1413 CP1413 CP1613 CP5412A2 TCP/IP < Remove Installed: CP1413 CP5412A2 TCP/IP Esources
4	In the "Resources" dialog, you will see a pair of values, for example 03E0H - 03E7H for the "Input/Output Range" entry. Note down the value which you will require to set the I/O range on the CP 1413.

Interrupt and Memory Range

The parameters "Interrupt" and "Memory Range" are set automatically by the Plug and Play function of the operating system and you should only change them manually in the system configuration in exceptional circumstances.

Configuring the	Once you have specified the hardware parameters, you must
Software	configure the software for the CP 1413.



After hardware configuration, you automatically return to the "Access Path" tab in which you can configure the software.

Procedure for Software Configuration

Follow the steps outlined in the table below in the "Access Path" tab page:

Step	Procedure
1	Select an access point in the "Access Point of the Application" list box.
	If you select " <add delete="">", you can also create a new access point.</add>
2	Select a module parameter set in the "Interface parameter assignment used" list box.
3	Configure the selected module parameter set with the "Properties" button.
4	Repeat steps 1, 2 and, if necessary, step 3 for further access points.
5	Close the configuration program.Save your assignment with OK,
	 Discard new assignments without saving with Cancel.

GP

If no access point was assigned to the module, it is not possible to operate the module.

Preparing to Install the Hardware	To install the CP 1413, you require the value set during the hardware configuration for the I/O address of the CP 1413. If you did not note down the value during the hardware configuration, you can find out the value as follows:
1	Click the Start button and select "Settings/Control Panel"
•	or
	click on the "My Computer" icon and select "Control Panel".
\checkmark	Click on the "System" icon and select "Device Manager".
\checkmark	Double click the icon "SIMATIC NET".
\checkmark	Select the module you want to install from the displayed modules and click the "Properties" button.
\checkmark	Select "Resources".
✓	Under the input/output range you will see a pair of values, for example $03E0H - 03E7H$. Note the values that you require for setting the I/O range of the CP 1413.
Installing the Hardware	To install the CP 1413 you require the values for the I/O range of the module during hardware configuration.
\checkmark	Read the installation instructions for the CP 1413 in the appendix. (Chapter 5).
✓	Set the proposed I/O range on the CP 1413 and install the module as described in the instructions.
Starting the Driver	When you reboot your system, the protocols you have activated are started automatically.
Restarting and Resetting a Module	Restarting and resetting a module in the "Mode" tab is only possible when a module parameter set is active. After quitting the configuration program, the last selected module parameter set is activated when you restart the configuration program.
¢\$	The following entry in "Interface Parameter Set Used" must not be selected:
	"ISO Ind. Ethernet -> SIMATIC NET NDIS-Ether"-

Settings for STEP 5 When assigning parameters to the module, the access point of the application "CP_H1_1:" must be assigned to the module "CP 1413" for STEP 5 operation.

3.5 Operating PC Networks

Network Operation In addition to the automation protocols, you can also operate PC networks with the CP 1413 under Windows 98.

Installation To install the network functions of TF-1413/Windows 98, follow the steps outlined below:

Step	Description				
1	Call the network configuration of Windows 98 in the control panel (taskbar Start → Settings → Control Panel → Network).				
2	Select the "Add" button in the "Configuration" tab page.				
3	Select "Adapter" as the network component to be installed.				
4	Click the "Add" button.				
5	Select "SIEMENS AG" in the "Manufacturers" list box. Select Network adapters Click the Network adapter that matches your hardware, and then click OK. If you have an installation disk for this device, click Have Disk. Manufacturers: Samsung Silicom Socket Communications Have Disk DK Cancel				
6	Click the "OK" button.				
7	The remaining installation is analogous to that for other network cards.				

Parallel Operation of TF 1413/ Windows 98	If you operate PC networks via the CP 1413, make sure that the Ethernet address specified in a TF database matches the gray Ethernet address displayed by the configuration program of the CP 1413. To allow you to change this address, you must temporarily deactivate the TF protocol. If the Ethernet addresses do not match, this can lead to communication problems when operating PC networks.
Support for Novell Networks	The CP 1413 does not support automatic detection of frame formats. Please set the frame format you are using for the SIMATIC NET CP 1413 network card (adapter) using the network configuration of Windows 98.
Uninstalling	Make sure that you uninstall the SIMATIC NET CP 1413 network card (adapter) using the network configuration of Windows 98 before you uninstall this product.

4 How to Get Help

4.1 Help with Technical Questions

Documentation	Information about using this product can be found in the following sources:				
	In the corresponding paper documentation				
	In the online help (F1 key)				
	 In the text and PDF files on the SIMATIC NET CD 				
	In the following manuals of the S7-400 H programmable controller				
	 Fault-Tolerant Systems 				
	 Configuring Hardware and Communication Connections with STEP 7 V5.0 				
	 Programming with STEP 7 V5.0 				
Who to Contact	If you have technical questions about using the software and your problem is not dealt with in the documentation or in the integrated help system, please contact your Siemens representative or dealer.				
	The addresses are listed in the following:				
	In our catalog IK 10				
	On the Internet (http://www.ad.siemens.de/net)				
	 In the "README.TXT" file in the main folder of the SIMATIC NET CD 				
Courses and Further Support	The H/F Competence Center in Nuremberg offers a special workshop on the topic of fault-tolerant SIMATIC S7 programmable controllers. The H/F Competence Center also supports you during configuration, when putting your system into operation and if you have problems on site.				
	For more detailed information, contact:				
	 Phone: +49 - 911 - 895 - 4759 				
	• Fax: +49 - 911 - 895 - 4519				

Common
QuestionsOur customer support on the Internet provides useful information
and answers to commonly asked questions. Under FAQ (Frequently
Asked Questions), you will find information about the entire range
of products.

The address of the SIMATIC NET home page in the World Wide Web of the Internet is as follows:

http://www.ad.siemens.de/net

SIMATIC Customer Support Hotline

Open round the clock, worldwide:



Nuremberg	SIMATIC Premium Hotline		
SIMATIC BASIC Hotline	(Calls charged, only with SIMATIC Card)		
Local time: Mo to Fr 8:00 to 18:00 (CET) Phone: +49 (911) -895-7000 Fax: +49 (911) -895-7002 E-mail: simatic.support@nbgm.siemens.de	Local time: Mo to Fr 0:00 to 24:00 (CET) Phone: +49 (911) -895-7777 Fax: +49 (911) -895-7001		

Johnson City	Singapore		
SIMATIC BASIC Hotline	SIMATIC BASIC Hotline		
Local time: Mo to Fr 8:00 to 17:00 Phone: +1 423 461-2522 Fax: +1 423 461-2231 E-mail: simatic.hotline@sea.siemens.com	Local time:Mo to Fr 8:30 to 17:30Phone:+65 740-7000Fax:+65 740-7001E-mail:simatic.hotline@sae.siemens.com.sg		

Authorization	If you have problems with your authorization, you can contact our
Hotline	authorization hotline:

- Phone: +49 911 895 7200
- Telefax: +49 911 895 4212

4.2 Who to Contact for SIMATIC NET Training

CourseSiemens AGRegistrationTrainings-Center für Automatisierungstechnik
A&D PT 49 KursbüroÖstliche Rheinbrückenstraße 50
76181 Karlsruhe
GermanyÖstliche Rheinbrückenstraße 50
76181 Karlsruhe
GermanyPhone+49 - 721 - 595 - 2917
Fax+49 - 721 - 595 - 6987

5 Appendix - Installation Instructions for the CP 1413

Hardware Requirements	The CP 1413 is a card for IBM AT-compatible PCs/PGs and requires a 16-bit ISA slot for operation.				
CSF	When installing the module, make sure you adhere to the guidelines for avoiding charges on electrostatically sensitive devices (ESD).				
(F	Make sure that the power to the PC/PG is switched off before opening the casing or inserting or removing the module.				
E	Before installing the module, read the chapter "Installing Modules" (or similar title) in the manual describing your PC/PG and follow the instructions.				
Configuration Register	Using the configuration register all the values required for operating the module are loaded on the CP by the software. the configuration register occupies four addresses in the I/O area of the PC. The 8 occupied addresses are set using jumpers. Fig. 5.1 shows the position of the jumpers on the module.				
Layout of the CP 1413	The following diagram shows the layout of the CP 1413 and the location of the jumpers for setting the I/O range.				
	Jumper for I/O range				

Fig. 5.1 Layout of the CP 1413

4 • • 3 2 • • 1 X3

Setting the Jumper The following table shows the possible jumper settings on the CP 1413. In the standard setting, both jumpers are plugged in.

I/O Address Range (hex)	X3 / 1-2	X3 / 3-4	
03E0-03E7	0-0	0-0	
0390-0397	0-0	0 0	
0100-0107	0 0	0 0	

F

The selected I/O range must not be used by any other card.

FurtherTo operate the software, a free memory area of at least 64 Kbytes is
required. If the start address is higher than 1 Mbyte, 256 Kbytes are
required.

The CP 1413 occupies one of the following interrupts:

Possible Interrupt Numbers	5	10	12	15
----------------------------	---	----	----	----

These settings are first made when you install the software and are explained in detail in the section dealing with software installation.

The following table shows the default interrupt assignment of a computer:

Interrupt	Belegung
IRQ 5	Sound card , MPI cards
IRQ 10	Network adapters, SCSI controller
IRQ 12	PS2 mouse
IRQ 15	Hard disk controller, SCSI controller

If all the possible interrupts are being used by the hardware listed above, you will have to reassign hardware components (driver software of the manufacturers) or remove unnecessary hardware or disable it in the BIOS.

5.1 Problems Assigning Hardware Resources

If you see error messages displayed when you restart the module or the computer, you have the following diagnostic tools available:

- Messages of the Simatic Net Monitor
- Message from the PG/PC Interface
- Checking the BIOS settings

Messages of the Simatic Net Monitor	The Simatic Net Monitor appears only if an error occurs and usually means that there are conflicts in the hardware resources. Check the set hardware parameters (IRQ, memory range, I/Os).
BIOS Settings	If there are no free resources on your system, check the BIOS set- tings.
	The changes for various BIOS are described on the following pages.

Activating the BIOS MEMORY GAPs. (ISA Memory Hole, Memory Hole at 15M-16M) This setting <u>must</u> be activated if you use the memory ranges F0....,F4.... and F8.... (Enabled, Extended).

AWARD BIOS:

Set the memory hole at 15M-16M to enable

Auto Configuration DRAM Timing	Memory	Parity/ECC Che	ck	:Disable
DRAM RAS# Precharge Time	L2 Cach	e Cacheable Si	ze	:64MB
DRAM R/W Leadoff Timing	Chipset	NA# Asserted		:Enabled
Fast RAS# To CAS# Delay	_			
DRAM Read Burst (EDO/FPM)				
DRAM Write Burst Timing				
DRAM Speculative Leadoff				
Turn-Around Insertion				
ISA Clock				
Turbo Read Leadoff				
System BIOS Cacheable				
Video BIOS Cacheable				
8 Bit I/O Recovery Time				
16 Bit I/O Recovery Time				
Memory Hole At 15M-16M	ESC	:Quit	(B)	:Select Item
Peer Concurrency	F1	:Help	PU/PD/+/-	:Modify
Chipset Special Features	F5	:Old Values	(Shift)F2	:Color
DRAM ECC PARITY Select	Fб	:Load BIOS Def	aults	
	F7	:Load Setup De	faults	

PHOENIX BIOS:

Set ISA MEMORY GAP to extended

Main Advanced	Security Power	Exit
Advanced	Item Specific Help	
ISA Memory Gap: PCI Bus Parity Checkin ECC Memory Checking	[Extended] g: [Disabled] [Enabled]	If enabled, turn system RAM off to free address space for use with an option card.m A 1M extended memory gap, starting at 15M, will be created in system RAM.

Set Power Management to Disabled

If power management is active, this slows down the computer and can even lead to a timeout.

AWARD BIOS:

Set Power Management to disable

Power Management :Disable			** Power Down & Resume Events **				
PM Contr	ol by APM	:Yes	IRQ3	(COM 2)		:ON	
Video Of	f Method	:V/H	IRQ4	(COM 1)		:ON	
		SYNC+Blank					
CPU Fan	Power Green	:Enabled	IRQ5	(LPT 2)		:OFF	
MODEM Us	se IRQ	:3	IRQ6	(Floppy Disk)		:ON	
			IRQ7	(LPT 1)		:ON	
Doze Mod	le	:Disable	IRQ8	(RTC Alarm)		:OFF	
Standby	Mode	:Disable	IRQ9	(IRQ2 Redir)		:ON	
Suspend	Mode	:Disable	IRQ10	(Reserved)		:ON	
HDD Powe	er Down	:Disable	IRQ11	(Reserved)		:ON	
			IRQ12	(PS/2 Mouse)		:ON	
** Wake	Up Events In Doz	e & Standby **	IRQ13	(Coprozessor)		:ON	
IRQ3	(Wake-Up Event)	ON	IRQ14	(Hard Disk)		:ON	
IRQ4	(Wake-Up	:ON	IRQ15	(Reserved)		:ON	
	Event)						
IRQ8	(Wake-Up	:OFF					
	Event)						
IRQ12	(Wake-Up	:ON	ESC	:Quit	(B(:Select	Item
	Event)						
			F1	:Help	PU/PD/+/-	:Modify	
			F5	:Old Values	(Shift)F2	:Color	
			F6	:Load BIOS De	faults		
			F7	:Load Setup D	efaults		

PHOENIX BIOS:

Set APM and Power Management to disabled.

Main Advanced	Security	Power	Exit	
				Item Specific Help
APM: Dower Management Mode:	[Dis	abled]		Enables or disables
rower Management Mode.	[DIS	abieuj		Management
Standby Timeout:	[Dis	abled]		
Suspend Timeout:	[Dis	abled]		
Suspend Mode:	[Sus	pend]		
Hard Disk Timeout:	[Dis	abled]		
Resume On Time:	[Off	1		
Resume Time:	[00:	00:00]		
8 Activity Detection				

Activating the Reset Configuration Data and Settings for the Operating System Type AWARD BIOS:

In our version of this BIOS, the Plug & Play option cannot be set by the user (this is, however, liable to change).

PHOENIX BIOS:

Set the Plug & Play OS option to NO

Main Advanced Security	Power Exit	
		Item Specific Help
Setting items on this menu to inco	rrect values	
may cause your system to malfuncti	Select 'Yes' if you want to clear the	
8 Cache Memory		System Configuration
8 Peripheral Configuration		Data
8 PCI Configuration		
8 Advanced System Configuration		
8 Power On/Off		
Plug & Play O/S: Reset Configuration Data: Lock Setup Configuration:	[NO] [YES] [NO]	
Large Disk Access Mode:	[DOS]	

Ś

Please read the installation instructions of the software you are using thoroughly and follow the instructions.