

# Support Packages for STEP 7 V12

STEP 7 Basic V12, STEP 7 Professional V12

HSP Download • February 2015



## Service & Support

Answers for industry.

**SIEMENS**

This entry is from the Siemens Industry Online Support. The general terms of use ([http://www.siemens.com/terms\\_of\\_use](http://www.siemens.com/terms_of_use)) apply.

**Security  
informa-  
tion**

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <http://www.siemens.com/industrialsecurity>.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <http://support.automation.siemens.com>.

Clicking the link below directly displays the download page of this document.

<http://support.automation.siemens.com/WW/view/en/72341852>

## Table of content

<b>1</b>	<b>Support Packages for STEP 7 .....</b>	<b>4</b>
<b>1.1</b>	<b>Support Packages for STEP 7 Basic or Professional V12.....</b>	<b>4</b>
1.1.1	HSP 0036.....	4
1.1.2	HSP 0050.....	4
1.1.3	HSP 0052.....	4
1.1.4	HSP 0053.....	4
1.1.5	HSP 0054.....	4
1.1.6	HSP 0074.....	4
<b>1.2</b>	<b>Support Packages for STEP 7 Basic or Professional V12 SP1.....</b>	<b>5</b>
1.2.1	HSP 0056.....	5
1.2.2	HSP 0057.....	5
1.2.3	HSP 0058.....	5
1.2.4	HSP 0063.....	5
1.2.5	HSP 0066.....	5
1.2.6	HSP 0072.....	5
1.2.7	HSP 0081.....	6
1.2.8	HSP 0087.....	6
1.2.9	HSP 0109.....	6
1.2.10	<b>New:</b> HSP 0114.....	6

# 1 Support Packages for STEP 7

## 1.1 Support Packages for STEP 7 Basic or Professional V12

STEP 7 Basic V12, STEP 7 Professional V12 or a Service Pack of this Version is required.

### 1.1.1 HSP 0036

is necessary for this module:

RFID Communication module RF120C for SIMATIC S7-1200

- 6GT2002-0LA00

### 1.1.2 HSP 0050

is necessary for this module:

CM AS-I MASTER ST ET 200SP (AS-I V3.0)

- 3RK7137-6SA00-0BC1

### 1.1.3 HSP 0052

is necessary for this modules:

SIFLOW FC070 24V for S7-300

- 7ME4 120-2DH20-0EA0
- 7ME4 120-2DH21-0EA0

### 1.1.4 HSP 0053

is necessary for this module:

SIMATIC ET 200SP, CM 4 X IO-LINK ST, KOMMUNIKATIONSMODUL IO-LINK MASTER V1.1

- 6ES7 137-6BD00-0BA0

### 1.1.5 HSP 0054

is necessary for this modules:

SIMATIC ET 200SP, IM155-6PN ST V1.1

- 6ES7155-6AU00-0BN0
- 6ES7155-6AA00-0BN0
- 6ES7193-6PA00-0AA0

### 1.1.6 HSP 0074

is necessary for this component:

PROFINET Driver for Controller

- 6ES7195-3AA00-0YA0

## **1.2 Support Packages for STEP 7 Basic or Professional V12 SP1**

STEP 7 Basic V12 SP1 or STEP 7 Professional V12 SP1 is required

### **1.2.1 HSP 0056**

is necessary for this modules:

SIMATIC ET 200SP, Analog Input/Output HS, Energy Meter

- 6ES7134-6HB00-0DA1
- 6ES7135-6HB00-0DA1
- 6ES7134-6PA00-0BD0

### **1.2.2 HSP 0057**

is necessary for this modules:

SIMATIC ET 200SP, Digital Input/Output HF, Analog Input RTD/TC HF

- 6ES7131-6BF00-0CA0
- 6ES7132-6BF00-0CA0
- 6ES7134-6JD00-0CA1

### **1.2.3 HSP 0058**

is necessary for this module:

SIMATIC ET 200SP, IM155-6PN HF

- 6ES7155-6AU00-0CNO

### **1.2.4 HSP 0063**

is necessary for this modules:

SITOP UPS1600

- 6EP4134-3AB00-2AP0
- 6EP4134-3AB00-2AY0
- 6EP4136-3AB00-2AY0

### **1.2.5 HSP 0066**

is necessary for this module:

SIMOCODE pro S

- 3UF7020-1A.01-0

### **1.2.6 HSP 0072**

is necessary for this modules:

SIPLUS S7-1500 / SIPLUS ET 200MP

- 6AG1155-5AA00-7AB0
- 6AG1505-0KA00-7AB0

- 6AG1521-1BH00-7AB0
- 6AG1521-1BL00-7AB0
- 6AG1522-1BH00-7AB0
- 6AG1522-1BL00-7AB0
- 6AG1531-7KF00-7AB0
- 6AG1532-5HD00-7AB0

### 1.2.7 HSP 0081

is necessary for this module:

SIWAREX WP321

- 7MH4138-6AA00-0BA0

### 1.2.8 HSP 0087

is necessary for this module:

SIWAREX WP241

- 7MH4960-4AA01

### 1.2.9 HSP 0109

is necessary for this module:

Distributed I/O ET 200SP: IM 155-6 PN ST SIPLUS

- 6AG1131-6BF00-7BA0 SIPLUS ET200SP DI 8X24VDC ST
- 6AG1131-6BH00-7BA0 SIPLUS ET200SP DI 16X24VDC ST
- 6AG1132-6BD20-7BA0 SIPLUS ET200SP DQ 4X24VDC/2A ST
- 6AG1132-6BF00-7BA0 SIPLUS ET200SP DQ 8X24VDC/0,5A ST
- 6AG1132-6BH00-7BA0 SIPLUS ET200SP DQ 16X24VDC/0,5A ST
- 6AG1134-6GD00-7BA1 SIPLUS ET200SP AI 4XI 2-/4-WIRE ST
- 6AG1134-6HD00-7BA1 SIPLUS ET200SP AI 4XU/I 2-WIRE ST
- 6AG1134-6JD00-2CA1 SIPLUS ET200SP AI 4XRTD/TC HF
- 6AG1135-6HD00-7BA1 SIPLUS ET200SP AQ 4XU/I ST
- 6AG1155-6AA00-7BN0 SIPLUS ET200SP IM155-6PN ST INCL. BA
- 6AG1193-6PA00-7AA0 SIPLUS ET200SP SERVER MODULE

### 1.2.10 New: HSP 0114

is necessary for this modules:

SIPLUS HCS4300

- 6BK1943-1AA00-0AA0
- 6BK1943-2AA00-0AA0